Secondary On-Board Diagnostic Control Module A (SOBDM) Air Inlet Duct - Plug-In Hybrid Electric Vehicle (PHEV)

Removal

1. **WARNING: Before beginning any service procedure in this section, refer to Safety Warnings in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.**

   Refer to: Health and Safety Precautions (100-00 General Information, Description and Operation).

2. Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

3. Refer to: Loadspace Trim Panel RH (501-05 Interior Trim and Ornamentation, Removal and Installation).

4. RH rear
   Refer to: Wheel and Tire (204-04A Wheels and Tires, Removal and Installation).

5. 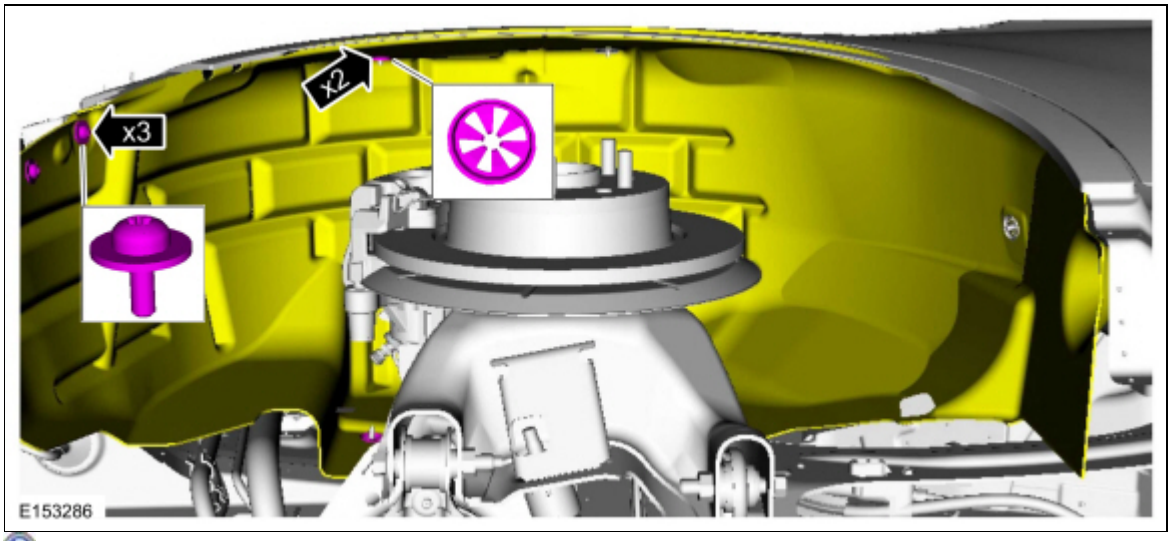

6.

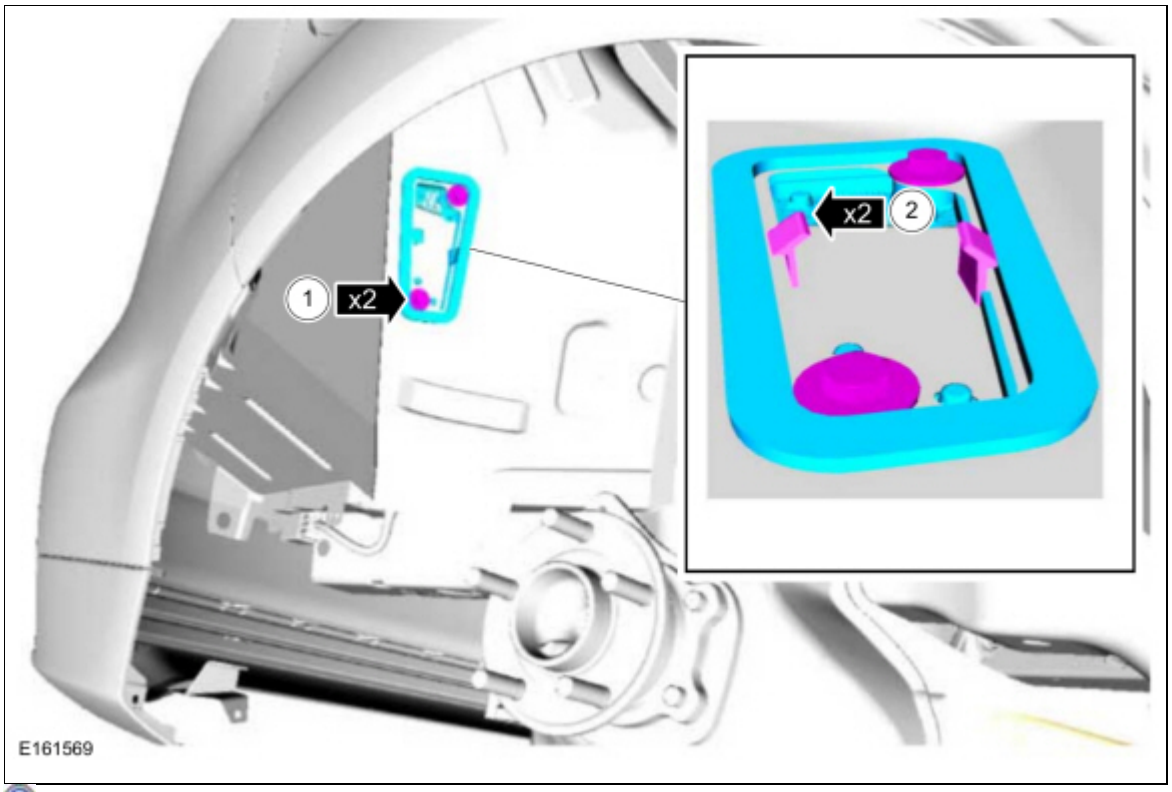

7.

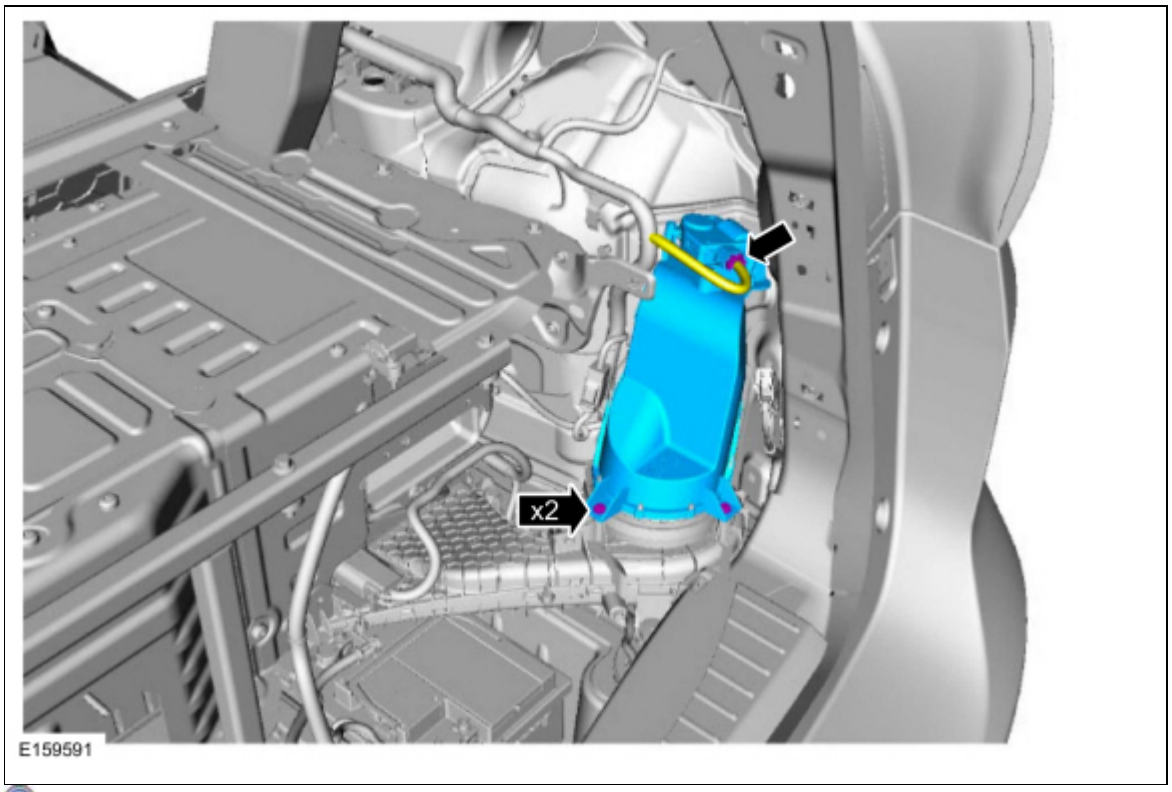

Installation

1.

- To install, reverse the removal procedure.
- If installing a new Secondary On-Board Diagnostic Control Module A (SOBDM) air inlet duct, use the scan tool to carry out the battery charger fresh air door calibration after the battery is connected.

Copyright © Ford Motor Company